

GRAND PIANO
GRAND PIANO Button + Keyboard Key

A0	GRAND PIANO BRIGHT	GRAND PIANO CONCERT
B0		GRAND PIANO MELLOW
C1		ROCK PIANO
CH1	JAZZ PIANO	
D1	DIGITAL E.PIANO 1	ELEC.PIANO
E1		DIGITAL E.PIANO 2
F1	HARPSICHORD	60'S E.PIANO
G1	STRINGS 1	VIBRAPHONE
A1	PIPE ORGAN	STRINGS 2
B1		JAZZ ORGAN
C2		ELEC.ORGAN 1
CH2	ELEC.ORGAN 2	
D2		
E2		
F2		
G2		
A2		
B2		
C3		
CH3		
D3		
E3		
F3		
G3		
A3		
B3		
C4		
CH4		
D4		
E4		
F4		
G4		
A4		
B4		
C5		
CH5		
D5		
E5		
F5		
G5		
A5		
B5		
C6		
CH6		
D6		
E6		
F6		
G6		
A6		
B6		
C7	Upper1 Volume (+)	Upper1 Volume (-)
CH7		
D7	Upper1 Octave Shift (+)	Upper1 Octave Shift (-)
E7		Transpose (-)
F7		Transpose (+)
G7	Touch Response (off)	Touch Response (1)
A7	Touch Response (2)	Touch Response (3)
B7	Touch Response (4)	Touch Response (5)
C8		

Upper1 Tone Selection

Upper1 Settings

Transpose

Touch Response

ELEC. PIANO
ELEC. PIANO Button + Keyboard Key

A0	GRAND PIANO BRIGHT	GRAND PIANO CONCERT
B0		GRAND PIANO MELLOW
C1		ROCK PIANO
CH1	JAZZ PIANO	
D1	DIGITAL E.PIANO 1	ELEC.PIANO
E1		DIGITAL E.PIANO 2
F1	HARPSICHORD	60'S E.PIANO
G1	STRINGS 1	VIBRAPHONE
A1	PIPE ORGAN	STRINGS 2
B1		JAZZ ORGAN
C2		ELEC.ORGAN 1
CH2	ELEC.ORGAN 2	
D2		
E2		
F2		
G2		
A2		
B2		
C3		
CH3		
D3		
E3		
F3		
G3		
A3		
B3		
C4		
CH4		
D4		
E4		
F4		
G4		
A4		
B4		
C5		
CH5		
D5		
E5		
F5		
G5		
A5		
B5		
C6		
CH6		
D6		
E6		
F6		
G6		
A6		
B6		
C7	Upper2 Volume (-)	Layer enable/disable
CH7		
D7	Upper2 Octave Shift (-)	Upper2 Octave Shift (+)
E7		Upper2 Volume (+)
F7		Upper2 Detune (-)
G7	Upper2 Detune (+)	Upper2 Detune (+)
A7	Lower Volume (-)	Lower Volume (+)
B7	Lower Detune (-)	Lower Detune (+)
C8		Lower Damper enable/disable

Upper2 Tone selection

Lower (Bass) Tone selection

Layer settings

Split settings

 **SOUND MODE** Button + Keyboard Key

A0	OPERA HALL	STANDARD HALL
B0		BERLIN HALL
C1		BRITISH STADIUM
D1	Hall Simulator depth (-)	Hall Simulator depth (+)
E1	Audio In Hall Simulator depth (-)	Audio In Hall Simulator depth (+)
F1	Surround Type 2	Surround Type 1
G1		Chorus (Tone)
A1	Chorus (1)	Chorus (2)
B1	Chorus (3)	Chorus (4)
C2		Brilliance (-)
D2	Brilliance (+)	
E2		
F2		
G2		
A2		
B2		
C3		
D3	String Resonance (off)	String Resonance (1)
E3	String Resonance (2)	String Resonance (3)
F3		String Resonance (4)
G3	Damper Resonance (Tone)	
A3	Damper Resonance (1)	Damper Resonance (off)
B3	Damper Resonance (2)	Damper Resonance (1)
C4	Damper Noise (off)	Damper Noise (Tone)
D4	Damper Noise (2)	Damper Noise (1)
E4		Damper Noise (3)
F4		Damper Noise (4)
G4	Key On Action Noise (Tone)	
A4	Key On Action Noise (1)	Key On Action Noise (2)
B4	Key On Action Noise (3)	Key On Action Noise (4)
C5		Key Off Action Noise (Tone)
D5	Key Off Action Noise (2)	Key Off Action Noise (3)
E5	Key Off Action Noise (1)	Key Off Action Noise (4)
F5		
G5		
A5		
B5		
C6		
D6		
E6		
F6		
G6		
A6		
B6		
C7		
D7		
E7		
F7		
G7		
A7		
B7		
C8		

Sound Mode Effects (A0-D1), **Chorus** (A1-B1), **Brilliance** (C2-D2), **Acoustic Simulator** (D3-F4)

 **FUNCTION** Button + Keyboard Key

A0	Auto Power Off enable/disable	Factory Reset
B0		
C1		Execution
D1	Bluetooth on/off	Bluetooth Pairing
E1		Clear Bluetooth connection logs
F1		
G1		Equal Temperament
A1	1	2
B1	3	4
C2		5
D2	6	7
E2	8	9
F2		10
G2	11	12
A2	13	14
B2	15	16
C3	C#	C
D3	D	D
E3	E	E
F3	F	F
G3	G	G
A3	A	A
B3	B	B
C4		Duet Mode (off/on)
D4	Left-side Keyboard Octave Shift (-)	Right-side Keyboard Octave Shift (+)
E4		Right-side Keyboard Octave Shift (-)
F4		Left-side Keyboard Octave Shift (+)
G4		
A4		
B4	Tuning (442.0Hz)	Tuning (-0.1Hz)
C5		Tuning (440.0Hz)
D5		Tuning (+0.1Hz)
E5	Keyboard Volume (+)	Keyboard Volume (-)
F5		Song Volume (+)
G5	Audio Volume (-)	Audio Volume (+)
A5	Audio In Center Canal enable/disable	
B5		
C6	Keyboard Channel (-)	Local Control on/off
D6	Keyboard Channel (+)	
E6	H-Reso Velocity MIDI OUT enable/disable	Pedal Function
F6		
G6		
A6		
B6		
C7		
D7	Touch Button Sensitivity (-)	Touch Button Sensitivity (+)
E7		
F7	Power On Alert enable/disable	Speaker Out enable/disable
G7		Panel Light setting
A7	Auto Resume enable/disable	Notification Tone Volume (-)
B7	Notification Tone Volume (+)	Notification Tone Set selection
C8		Panel Lock enable/disable

Scale Tuning selection (A1-B1), **Scale Tuning base note** (C2-D2), **Duet** (C4), **Tuning** (B4-C5), **Volume settings** (E5-F5), **MIDI settings** (D6-E6)